


Watch Movement Parts List and Disassemble Guide

Cal.VS97A

SOLAR SERIES

- 1/5 sec. chronograph
- World time
- Alarm
- Battery indicator

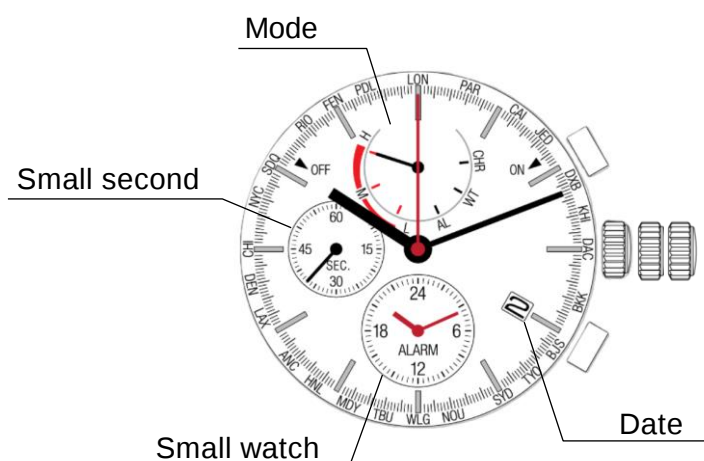


MOVEMENT SPECIFICATIONS

Movement Size	12'''	Height	4.40mm
Casing Diameter	Ø 27.0mm	Running Time	Approx. 6 months


Cal.VS97A Parts List 零件一覽表

No.	PARTS NAME	CHINESE(简体字)	QTY	VS97A1
(1)	Untransparent plate	阻透光板	1	4453 500
(2)	Solar cell unit	太阳能电池组件	1	4025 656
(3)	Solar cell lead terminal	太阳能电池引极片	2	4281 516
(4)	Screw	螺丝	2	0012 354
(5)	Date indicator maintaining plate	日历盘夹板	1	0808 523
(6)	Date indicator	日历盘	1	0878 ***
(7)	Date driving wheel	日历推动轮	1	0802 580
(8)	Screw	螺丝	1	0012 354
(9)	Date indicator guide plate	日历盘导向板	1	0712 507
(10)	Alarm 24hour wheel	闹铃24时轮	1	0278 503
(11)	Calendar corrector setting wheel	日历修正轮	1	0737 505
(12)	Date corrector setting transmission wheel plate fixing pin	日历修正传动轮夹板固定柱	1	0027 973
(13)	Calendar corrector setting transmission wheel	日历修正传动轮	1	4288 500
(14)	3rd calendar corrector setting transmission wheel	第三日历修正传动轮	1	0962 504
(15)	2nd calendar corrector setting transmission wheel	第二日历修正传动轮	1	0962 504
(16)	1st calendar corrector setting transmission wheel	第一日历修正传动轮	1	0962 580
(17)	Hour wheel	时轮	1	0271 636
(18)	Magnetic shield plate	耐磁板	1	4259 519
(19)	Screw	螺丝	3	0022 230
(20)	Secondary battery clamp	充电胎压片	1	4225 677
(21)	Secondary battery unit	电池	1	3023 24D
(22)	Screw	螺丝	3	0022 459
(23)	Circuit cover	电路板盖	1	4461 599
(24)	Conduction basel plate	导通基板	1	4224 525
(25)	Seconds wheel friction spring	秒齿芯掩片	1	0396 580
(26)	Circuit block	电路板	1	4000 970
(27)	Buzzer lead terminal	蜂鸣器引极片	1	4246 527
(28)	Train wheel bridge fixing pin	轮列夹板固定柱	1	0027 974
(29)	Train wheel bridge	轮列夹板	1	0125 527
(30)	Small second wheel	小秒轮	1	0240 521
(31)	1/5 seconds counting wheel	1/5秒CG轮	1	0888 501
(32)	Fourth wheel & pinion	四号轮	1	0241 583
(33)	Fifth wheel & pinon	五号轮	1	0701 581
(34)	Third wheel & pinon	三号轮	1	0231 580
(35)	Alarm intermediate wheel	闹铃中间轮	1	0950 590
(36)	Intermediate mode indicator wheel	机能状态中间轮	1	0950 590
(37)	1st 1/5 seconds counting intermediate wheel	1/5秒CG第一中间轮	1	0885 590
(38)	Alarm center wheel	闹铃中心轮	1	0902 502
(39)	Mode wheel	机能状态轮	1	0902 502
(40)	Minute wheel	度数轮	1	0261 580
(41)	Center wheel spring	中心轮压片	1	4283 581
(42)	2nd 1/5 seconds counting intermediate wheel	1/5秒CG第二中间轮	1	0885 591
(43)	Switch lever (A)	按掣竿(A)	1	4450 703
(44)	Rotor	转子	1	4146 710
	Alarm rotor	闹铃转子	1	4146 710
	Mode rotor	机能状态转子	1	4146 710
	1/5 Counting rotor	1/5CG转子	1	4146 710
(45)	Setting lever	鸡头	1	0383 592
(46)	Yoke	横担	1	0384 583
(47)	Setting stem	把芯	1	0351 586
(48)	Setting wheel	拨针轮	1	0281 580
(49)	Alarm 24 hour minute wheel	闹铃24时度数轮	1	0264 580
(50)	Clutch wheel	猪笼轮	1	0282 585
(51)	Center wheel & pinion	中心轮	1	0221 604
(52)	1/5 seconds counting coil block	1/5秒CG线圈	1	4002 567
(53)	Coil block (A)	线圈(A)	1	4002 567
(54)	Train wheel setting lever	轮组止动竿	1	0391 591
(55)	1/5 seconds counting stator	1/5秒CG定子	1	4239 711
(56)	Stator (A)	定子(A)	1	4239 710
(57)	Mode coil block	机能状态线圈	1	4002 568
(58)	Alarm coil block	闹铃线圈	1	4002 568
(59)	Alarm stator	闹铃定子	1	4239 713
(60)	Mode stator	机能状态定子	1	4239 713
(61)	Switch lever (B)	按掣竿(B)	1	4450 701
	Holding ring for dial	表盘压圈	1	


VS97A Disassemble Chart (1)

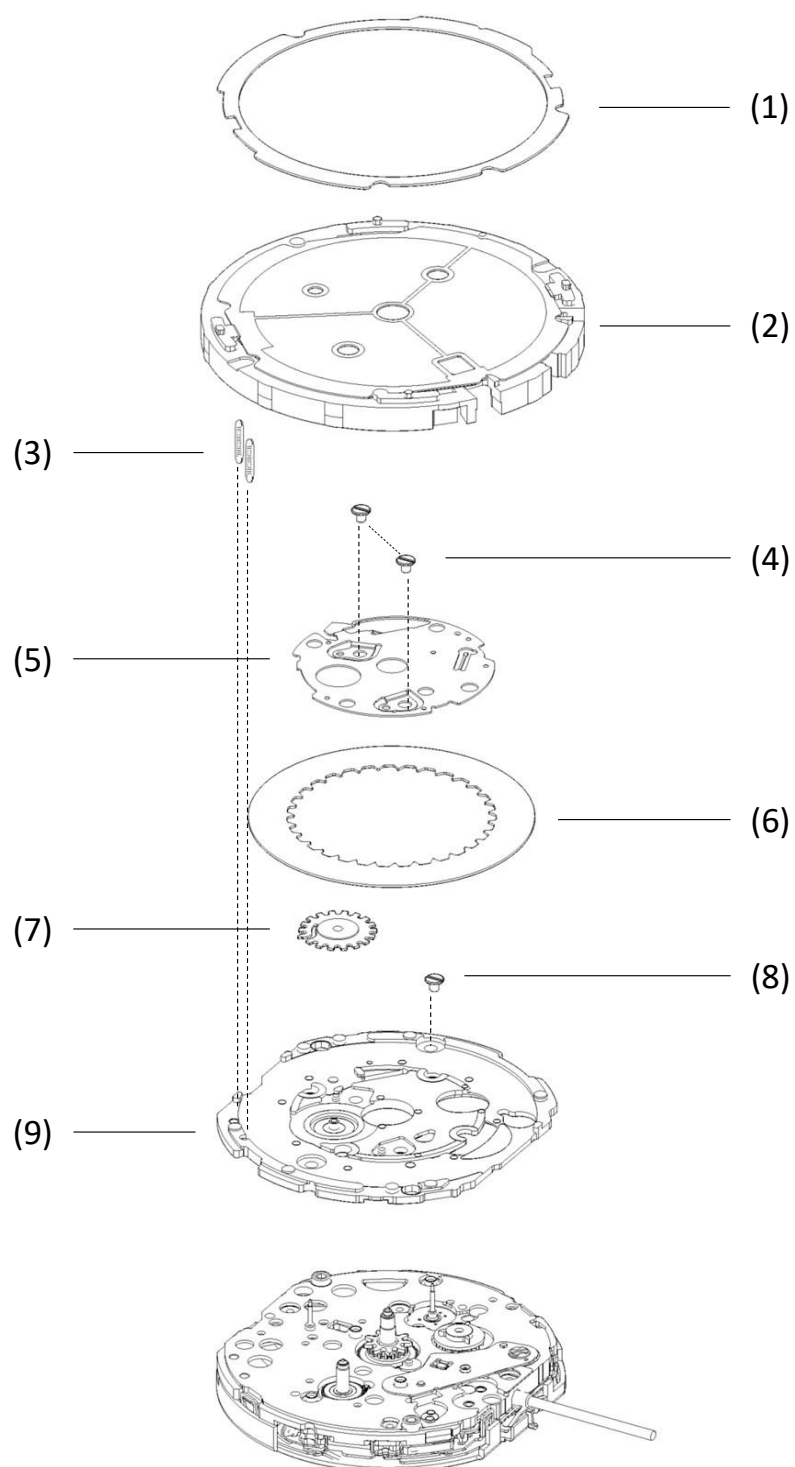


VS97A Disassemble Chart (2)

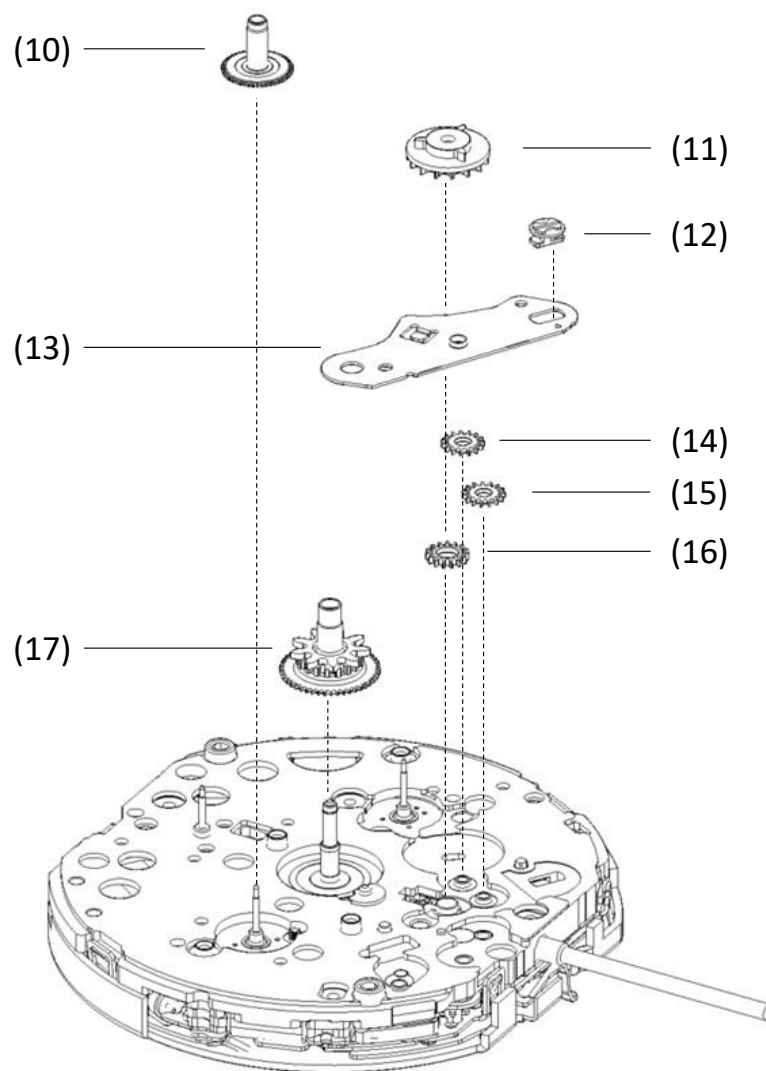


VS97A Disassemble Chart (3)

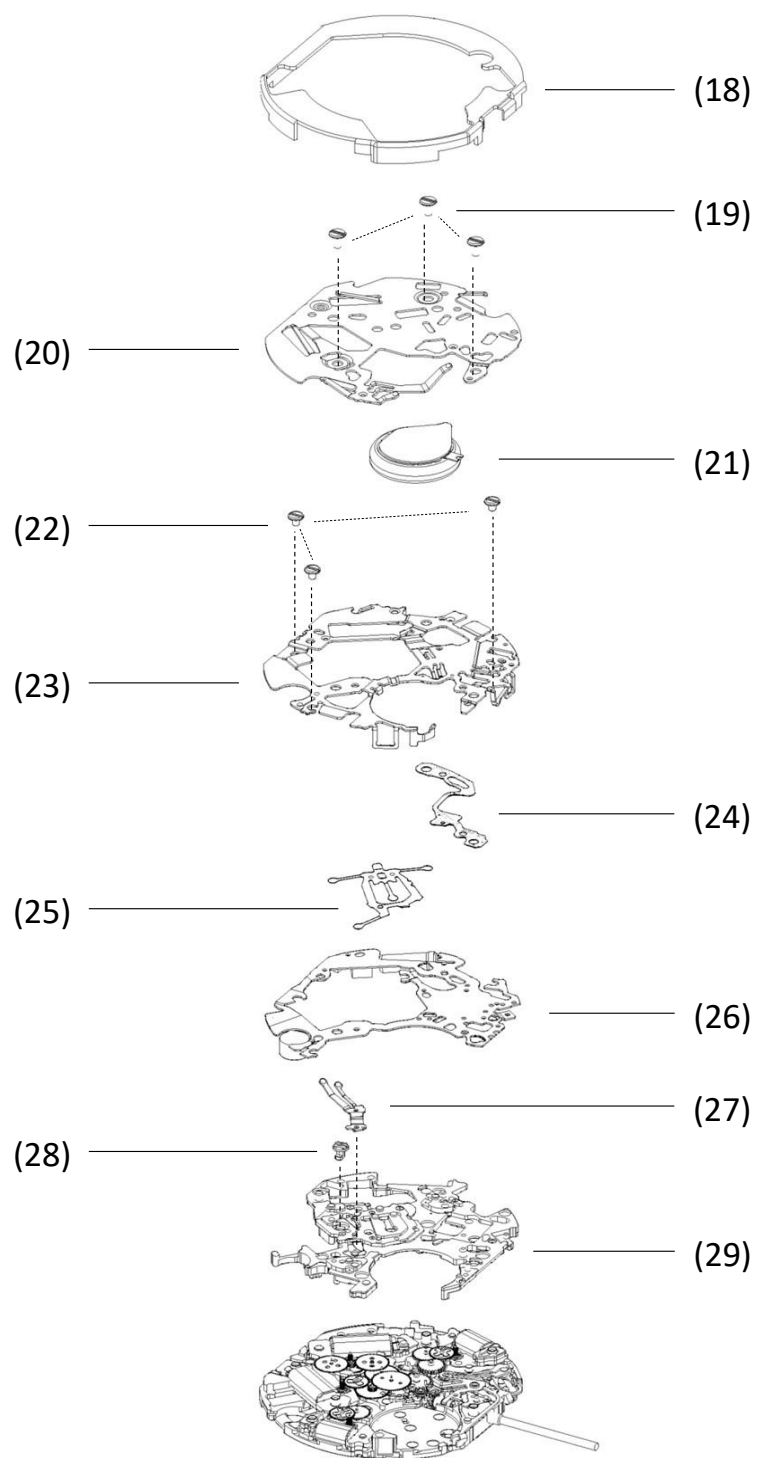

VS97A Disassemble Chart (4)

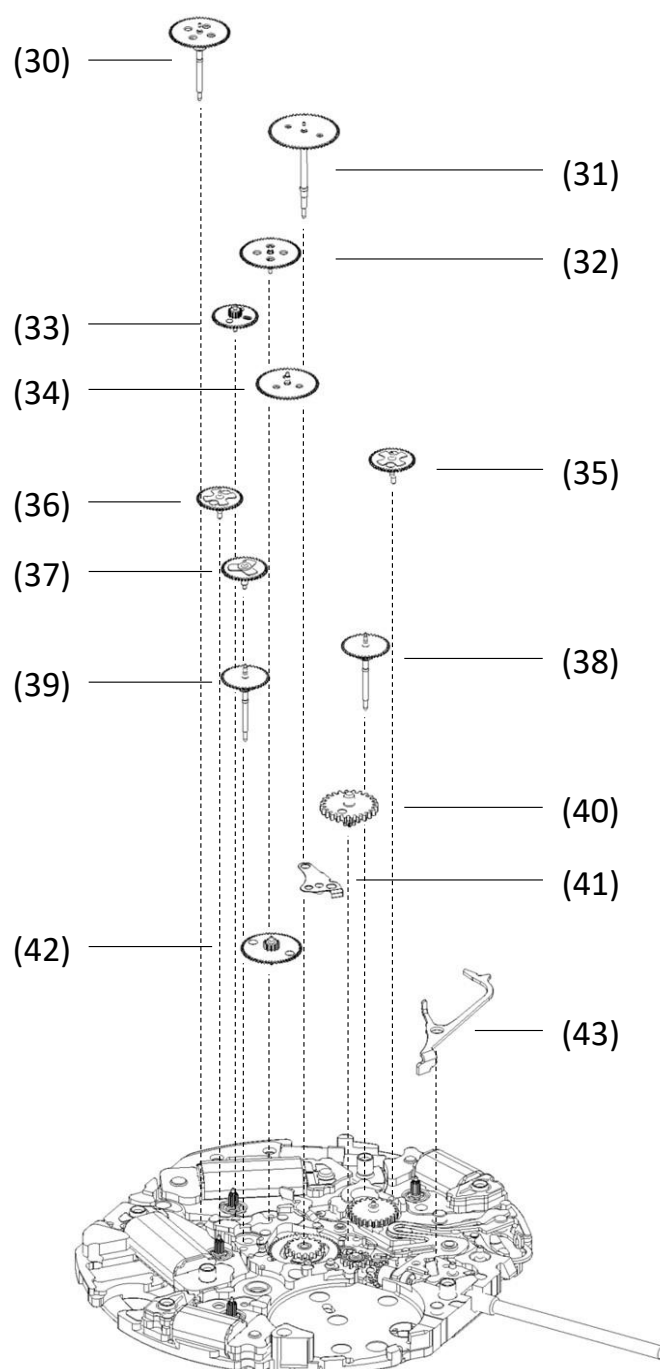

VS97A Disassemble Chart (5)

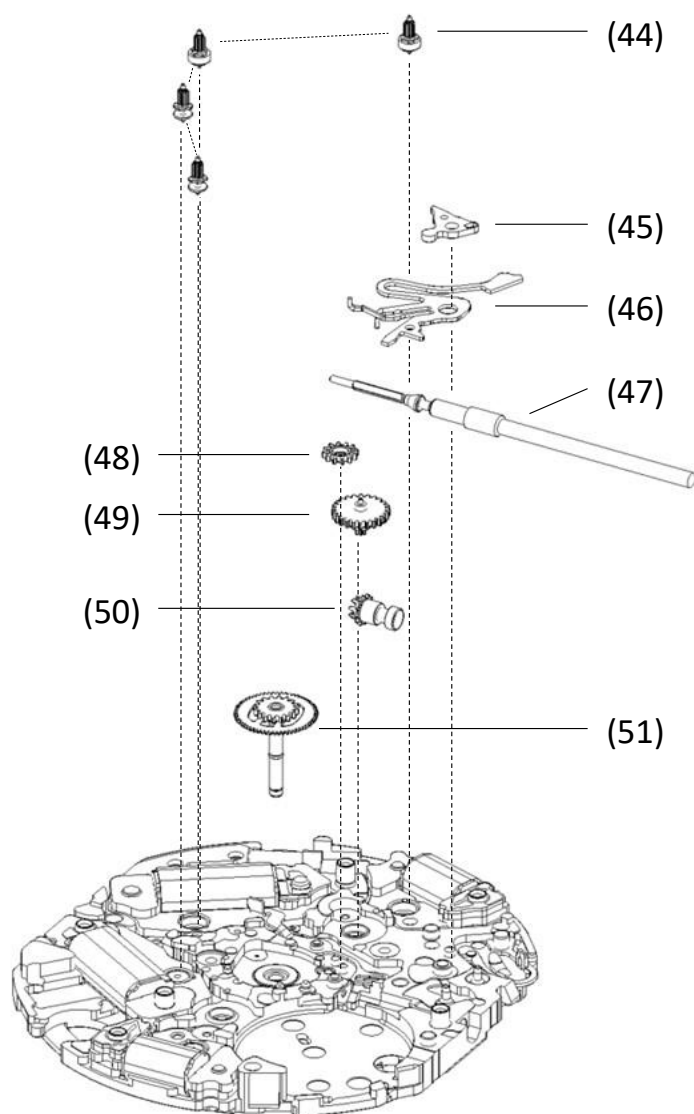

VS97A Disassemble Chart (5)

