


Watch Movement Parts List and Disassemble Guide

Cal.VS98A

SOLAR SERIES

- 1/5 sec. chronograph
- Perpetual calendar
- Alarm
- Battery indicator

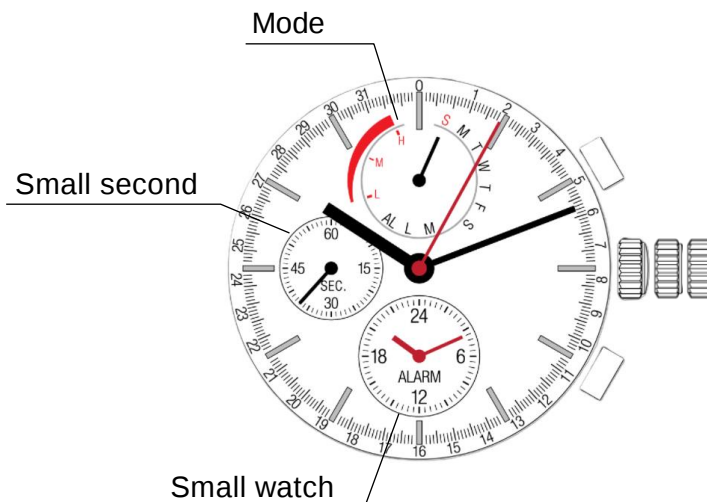


MOVEMENT SPECIFICATIONS

Movement Size	12'''	Height	4.40mm
Casing Diameter	Ø 27.0mm	Running Time	Approx. 6 months


Cal.VS98A Parts List 零件一覽表

No.	PARTS NAME	CHINESE(簡体字)	QTY	VS98A1
(1)	Untransparent plate	阻透光板	1	4453 500
(2)	Solar cell unit	太阳能电池组件	1	4020 559
(3)	Solar cell lead terminal	太阳能电池引极片	2	4281 516
(4)	Screw	螺丝	2	0012 354
(5)	Date indicator maintaining plate	日历盘夹板	1	0808 523
(6)	Screw	螺丝	1	0012 354
(7)	Date indicator guide plate	日历盘导向板	1	0712 507
(8)	Alarm 24hour wheel	闹铃24时轮	1	0278 503
(9)	Date indicator guide plate spacer fixing pin	日历盘导向板垫片固定柱	1	0027 973
(10)	Date indicator guide plate spacer	日历盘导向板垫片	1	4288 500
(11)	Hour wheel	时轮	1	0271 636
(12)	Magnetic shield plate(B)	耐磁板(B)	1	4259 519
(13)	Screw	螺丝	3	0022 230
(14)	Secondary battery clamp	充电池压片	1	4225 674
(15)	Secondary battery unit	电池	1	3023 24D
(16)	Screw	螺丝	3	0022 459
(17)	Circuit cover	电路板盖	1	4461 599
(18)	Conduction base plate	导通基板	1	4224 525
(19)	Seconds wheel friction spring	秒齿芯掩片	1	0396 580
(20)	Circuit block	电路板	1	4000 959
(21)	Buzzer lead terminal	蜂鸣器引极片	1	4246 527
(22)	Train wheel bridge fixing pin	轮列夹板固定柱	1	0027 974
(23)	Train wheel bridge	轮列夹板	1	0125 527
(24)	Small second wheel	小秒轮	1	0240 511
(25)	Calendar wheel	日历轮	1	0888 501
(26)	Fourth wheel & pinion	四号轮	1	0241 583
(27)	Third wheel & pinon	三号轮	1	0231 580
(28)	Fifth wheel & pinon	五号轮	1	0701 581
(29)	Intermediate mode indicator wheel	机能状态中间轮	1	0950 590
(30)	Alarm intermediate wheel	闹铃中间轮	1	0950 590
(31)	1st calendar intermediate wheel	日历第一中间轮	1	0885 590
(32)	Mode wheel	机能状态轮	1	0902 500
(33)	Alarm center wheel	闹铃中心轮	1	0902 502
(34)	Minute wheel	度数轮	1	0261 580
(35)	Center wheel spring	中心轮压片	1	4283 581
(36)	2nd calendar intermediate wheel	日历第二中间轮	1	0885 591
(37)	Switch lever (A)	按掣竿(A)	1	4450 703
(38)	Rotor	转子	1	4146 710
	Alarm rotor	闹铃转子	1	4146 710
	Calendar rotor	日历转子	1	4146 710
	Mode rotor	机能状态转子	1	4146 710
(39)	Setting lever	鸡头	1	0383 592
(40)	Yoke	横担	1	0384 583
(41)	Setting stem	把芯	1	0351 586
(42)	Setting wheel	拨针轮	1	0281 580
(43)	Alarm 24 hour minute wheel	闹铃24时度数轮	1	0264 580
(44)	Clutch wheel	猪笼轮	1	0282 585
(45)	Center wheel & pinion	中心轮	1	0221 604
(46)	Calendar coil block	日历线圈	1	4002 567
(47)	Coil block (A)	线圈(A)	1	4002 567
(48)	Train wheel setting lever	轮组止动竿	1	0391 591
(49)	Calendar stator	日历定子	1	4239 711
(50)	Stator (A)	定子(A)	1	4239 710
(51)	Mode coil block	机能状态线圈	1	4002 568
(52)	Alarm coil block	闹铃线圈	1	4002 568
(53)	Alarm stator	闹铃定子	1	4239 713
(54)	Mode stator	机能状态定子	1	4239 713
(55)	Switch lever (B)	按掣竿(B)	1	4450 701
Holding ring for dial		表盘压圈	1	


VS98A Disassemble Chart (1)

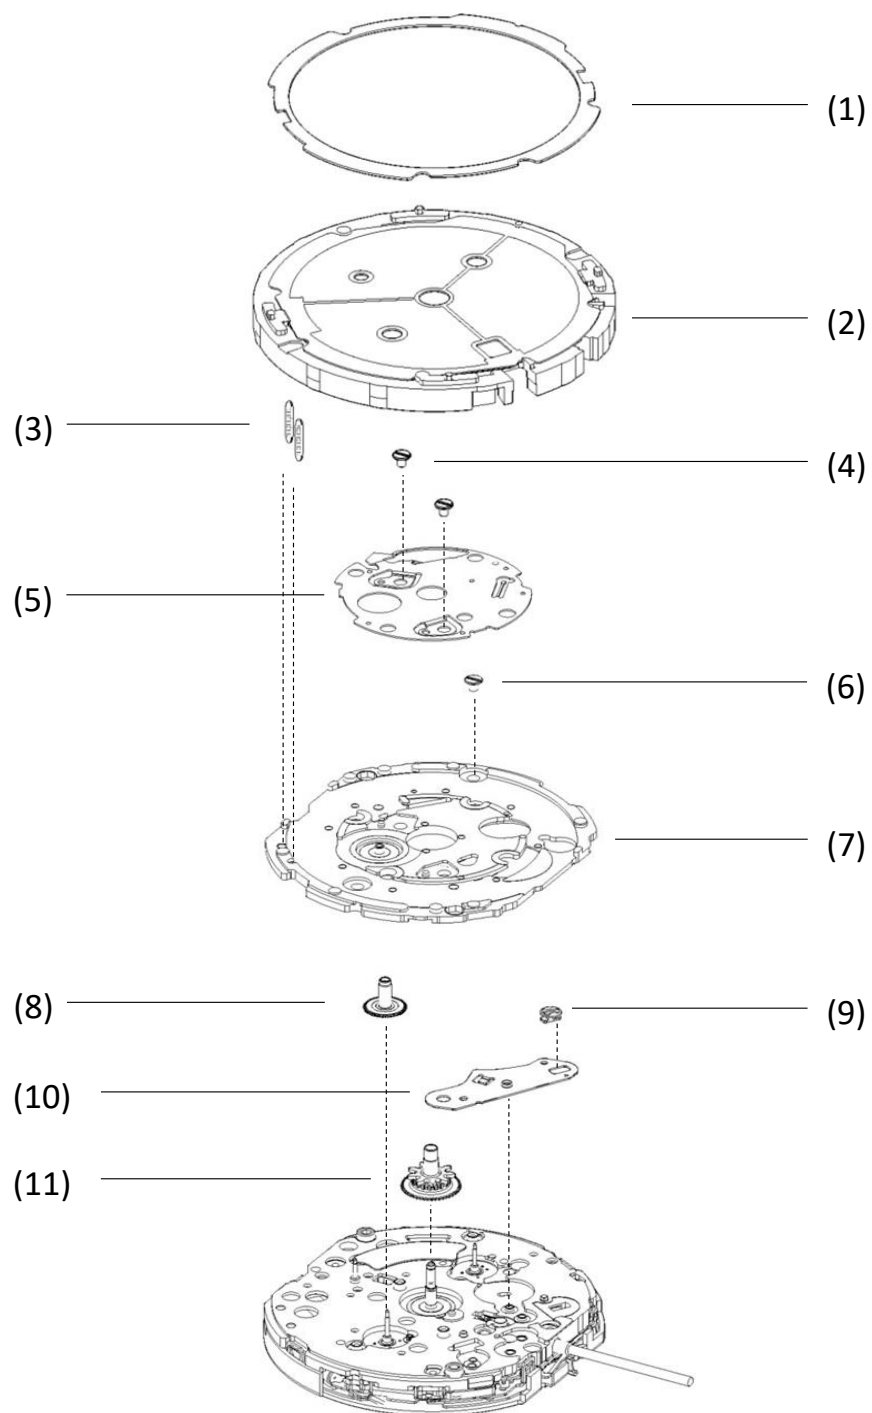


VS98A Disassemble Chart (2)

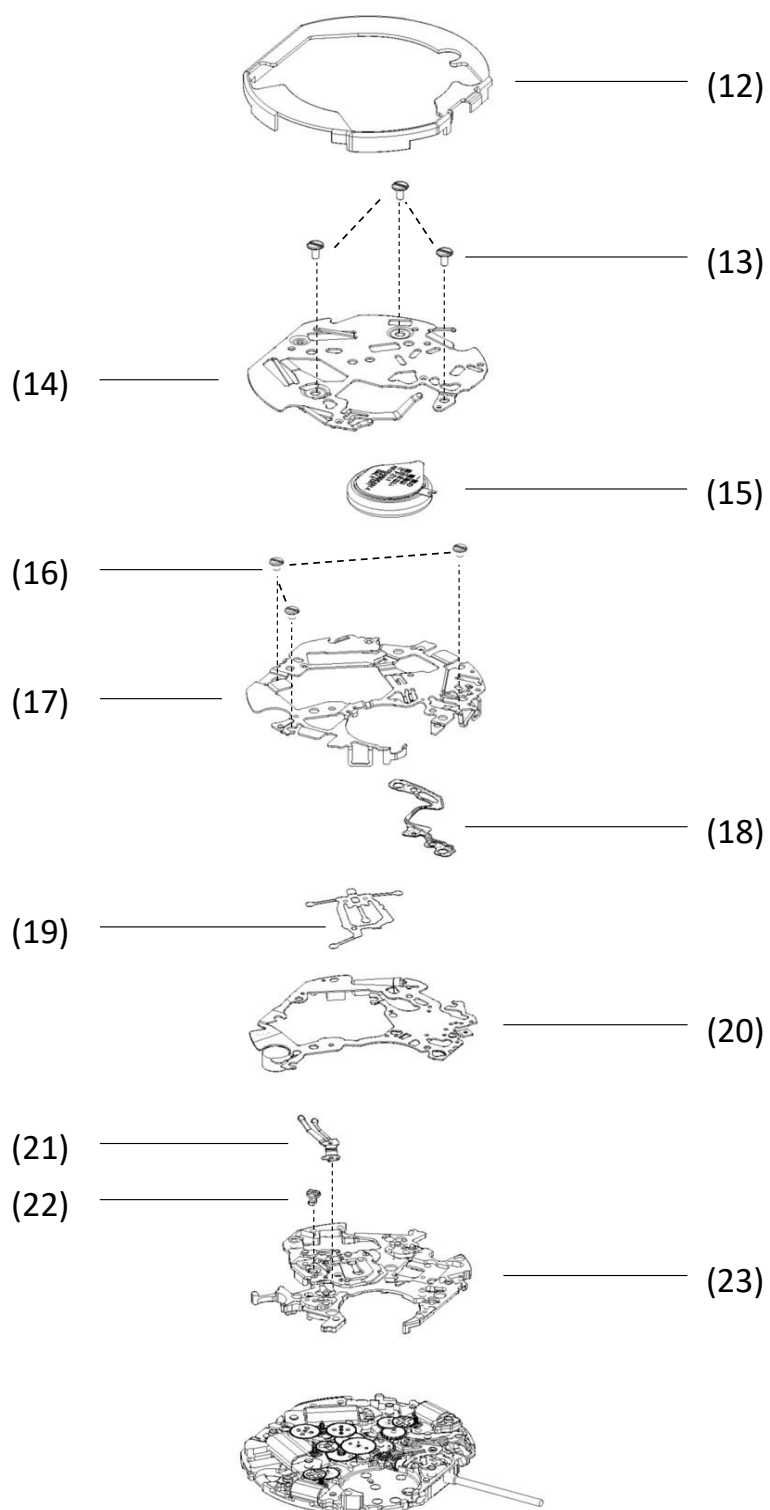

VS98A Disassemble Chart (3)

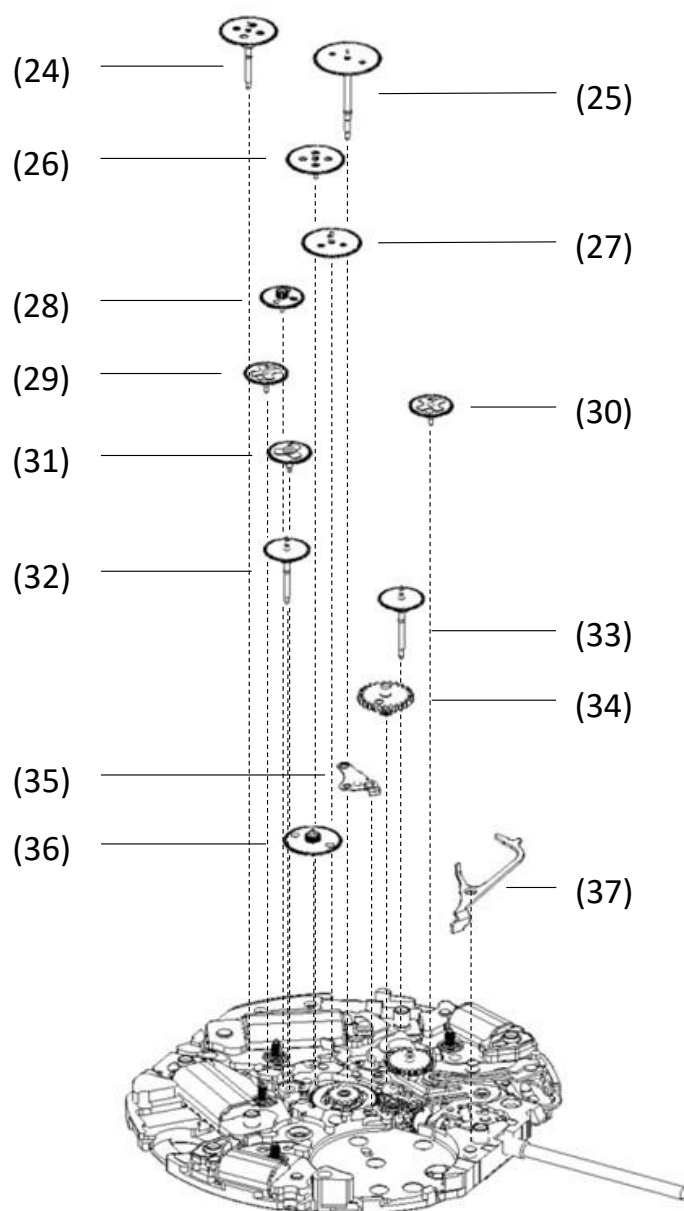

VS98A Disassemble Chart (4)

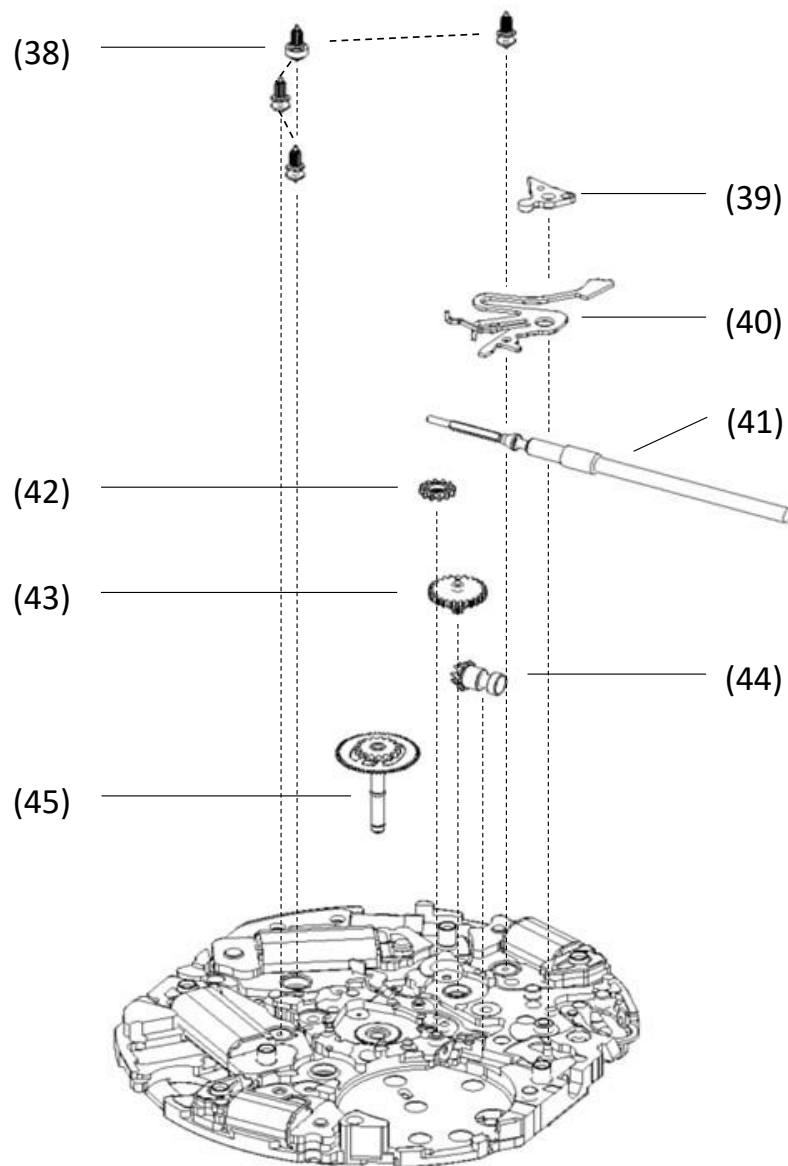

VS98A Disassemble Chart (5)

