


Watch Movement Parts List and Disassemble Guide

Cal.VS54A

SOLAR SERIES

- 3 hands / Date
- Power storage indicator

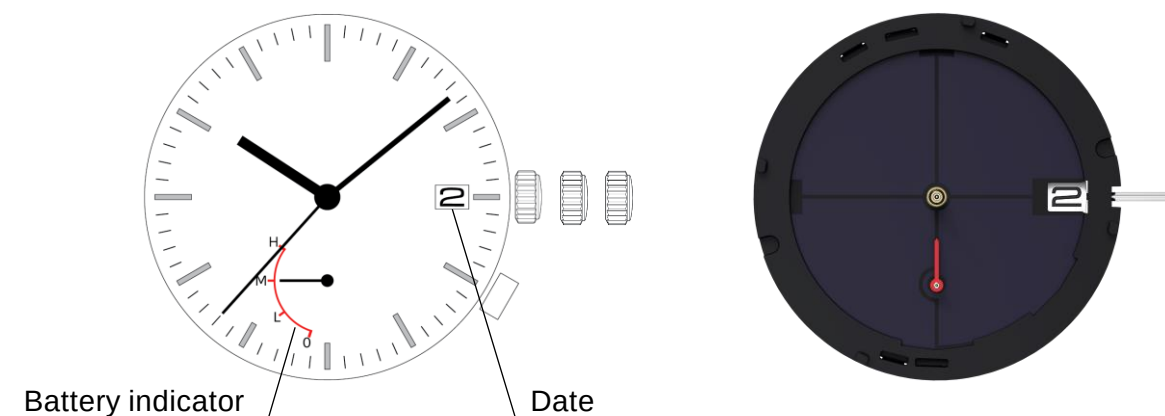

MOVEMENT SPECIFICATIONS

Movement Size 13 1/2'''

Height 4.52mm


Casing Diameter Ø 30.6mm

Running Time Approx. 5 months


Cal.VS54A Parts List 零件一覽表

No.	PARTS NAME	CHINESE(简体字)	QTY	VS54A1
(1)	Solar cell unit	太阳能电池组件	1	4020 560
(2)	Solar cell lead terminal	太阳能电池引极片	2	4281 516
(3)	Screw	螺丝	3	0022 247
(4)	Date indicator maintaining plate	日历盘夹板	1	0808 528
(5)	Date jumper	日历簧	1	0810 507
(6)	Date indicator	日历盘	1	0878 ***
(7)	Date indicator guide plate	日历盘导向板	1	0712 509
(8)	Date indicator driving wheel	日历推动轮	1	0802 520
(9)	Intermediate date wheel	日历推动中间轮	1	0817 553
(11)	Charge level indicator wheel	充电量显示轮	1	0888 511
(14)	Date corrector wheel	日历修正轮	1	0806 500
(15)	5th date corrector transmission wheel	第五日历修正传动轮	1	0962 900
(16)	Hour wheel	时轮	1	0271 662
(17)	2nd date corrector transmission wheel	第二日历修正传动轮	1	0962 891
(18)	3rd date corrector transmission wheel	第三日历修正传动轮	1	0962 891
(19)	4th date corrector transmission wheel	第四日历修正传动轮	1	0962 891
(20)	Battery	电池	1	3023 34R
(21)	Screw	螺丝	3	0022 247
(22)	Circuit cover	电路板盖	1	4461 682
(23)	Coil conduction basal plate	导通基板	1	4224 519
(24)	Connection (-) insulating plate	负极绝缘片	1	4216 567
(25)	Circuit block	电路板	1	4003 520
(26)	Battery connection (-)	负极片	1	4270 523
(27)	Train wheel bridge	轮列夹板	1	0125 543
(28)	Fourth wheel & pinion	四号轮	1	0241 605
(31)	Third wheel & pinion	三号轮	1	0231 904
(33)	Charge level indicator intermediate wheel	充电量显示中间轮	1	0701 904
(34)	Fifth wheel & pinion	五号轮	1	0701 904
(35)	Minute wheel	度数轮	1	0261 904
(36)	Charge level indicator rotor	充电量显示转子	1	4146 524
(37)	Rotor	转子	1	4146 524
(38)	Train wheel setting lever	轮组止动竿	1	0391 504
(39)	Screw	螺丝	2	0022 247
(40)	Coil block(A)	线圈A	1	4002 923
(41)	Coil block(B)	线圈B	1	4002 556
(42)	Stator(A)	定子A	1	4239 571
(43)	Stator(B)	定子B	1	4239 570
(44)	Setting wheel	拨针轮	1	0281 904
(45)	Setting lever	鸡头	1	0383 891
(46)	Yoke	横担	1	0384 890
(47)	Setting stem(long)	把芯 (长)	1	0351 578
	Setting stem(standard)	把芯 (标准)	1	0351 177
(48)	Clutch wheel	猪笼轮	1	0282 890
(49)	1st date corrector transmission wheel	第一日历修正传动轮	1	0962 890
(50)	Center wheel & pinion	中心轮	1	0221 663

Cal.VS5系 DISASSEMBLE CHART(1)

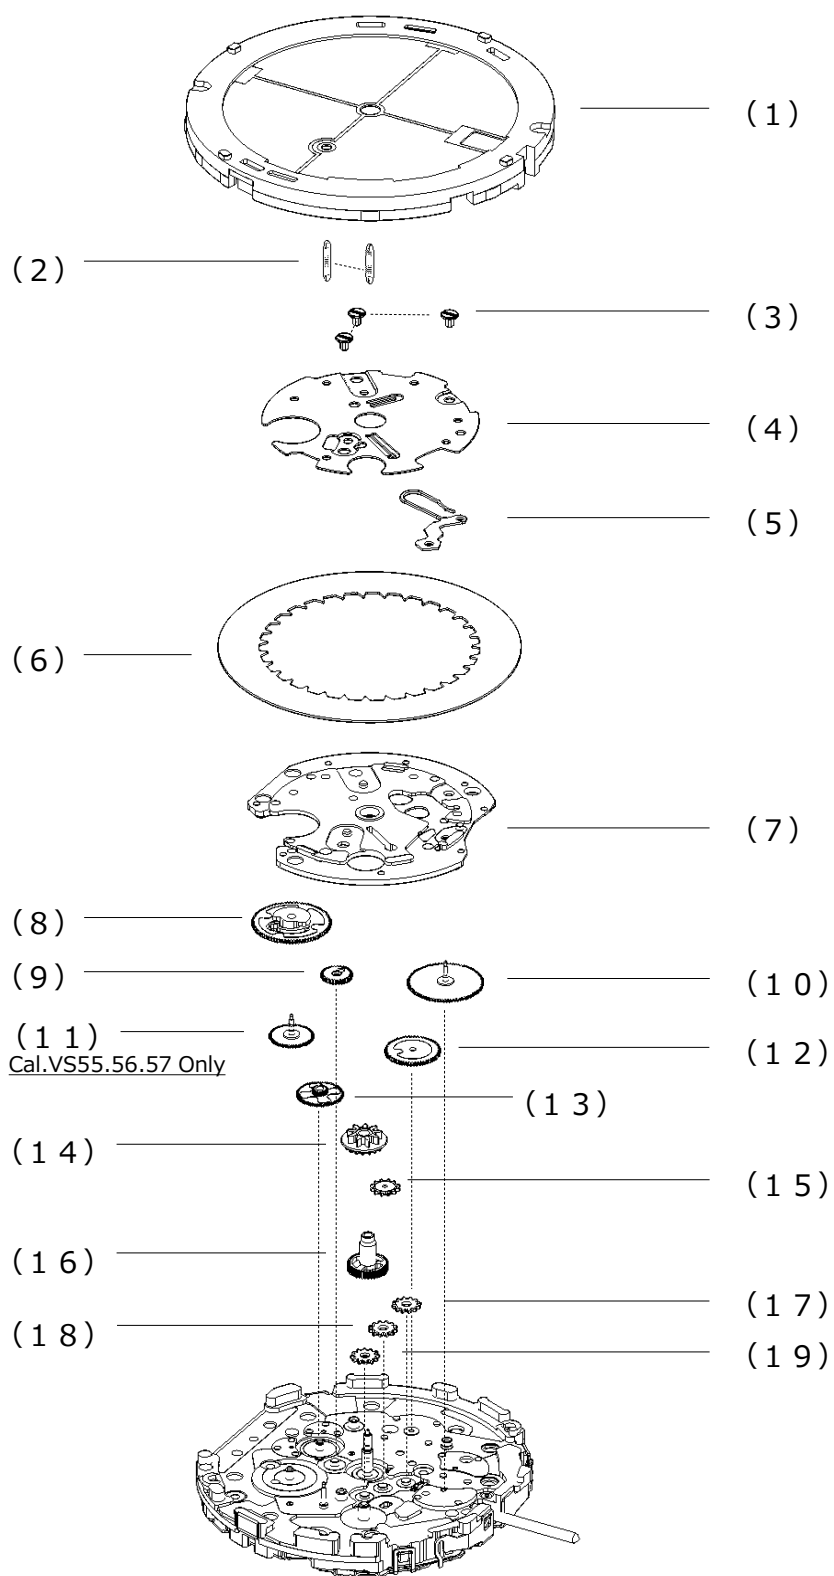

Cal.VS5系 DISASSEMBLE CHART(2)

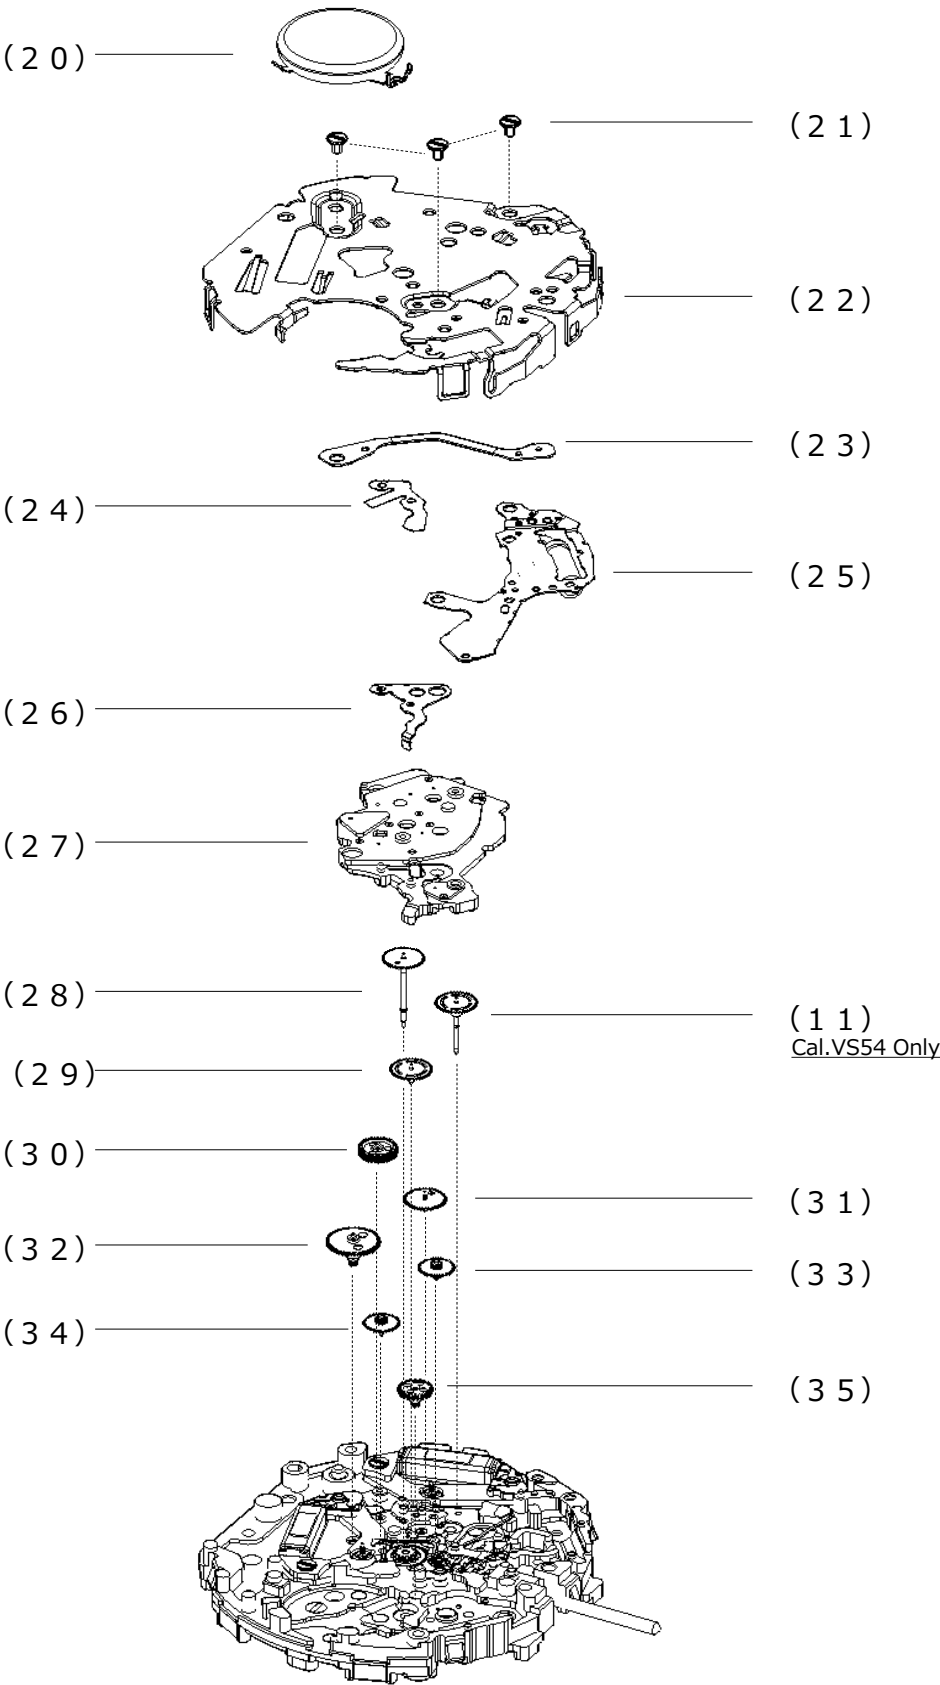

Cal.VS5系 DISASSEMBLE CHART(3)

